



MBS-56CS

Metal Working Bandsaw

50000320M

230/50/1


PARTS LIST

Walter Meier (Fertigung) AG
Bahnstrasse 24
8603 Schwerzenbach
Switzerland
Phone +41 44 806 47 48
Fax +41 44 806 47 58
jetinfo.eu@waltermeier.com
www.jettools.com




P-50000320M 2009/08/31



Breakdown for Bow Assembly

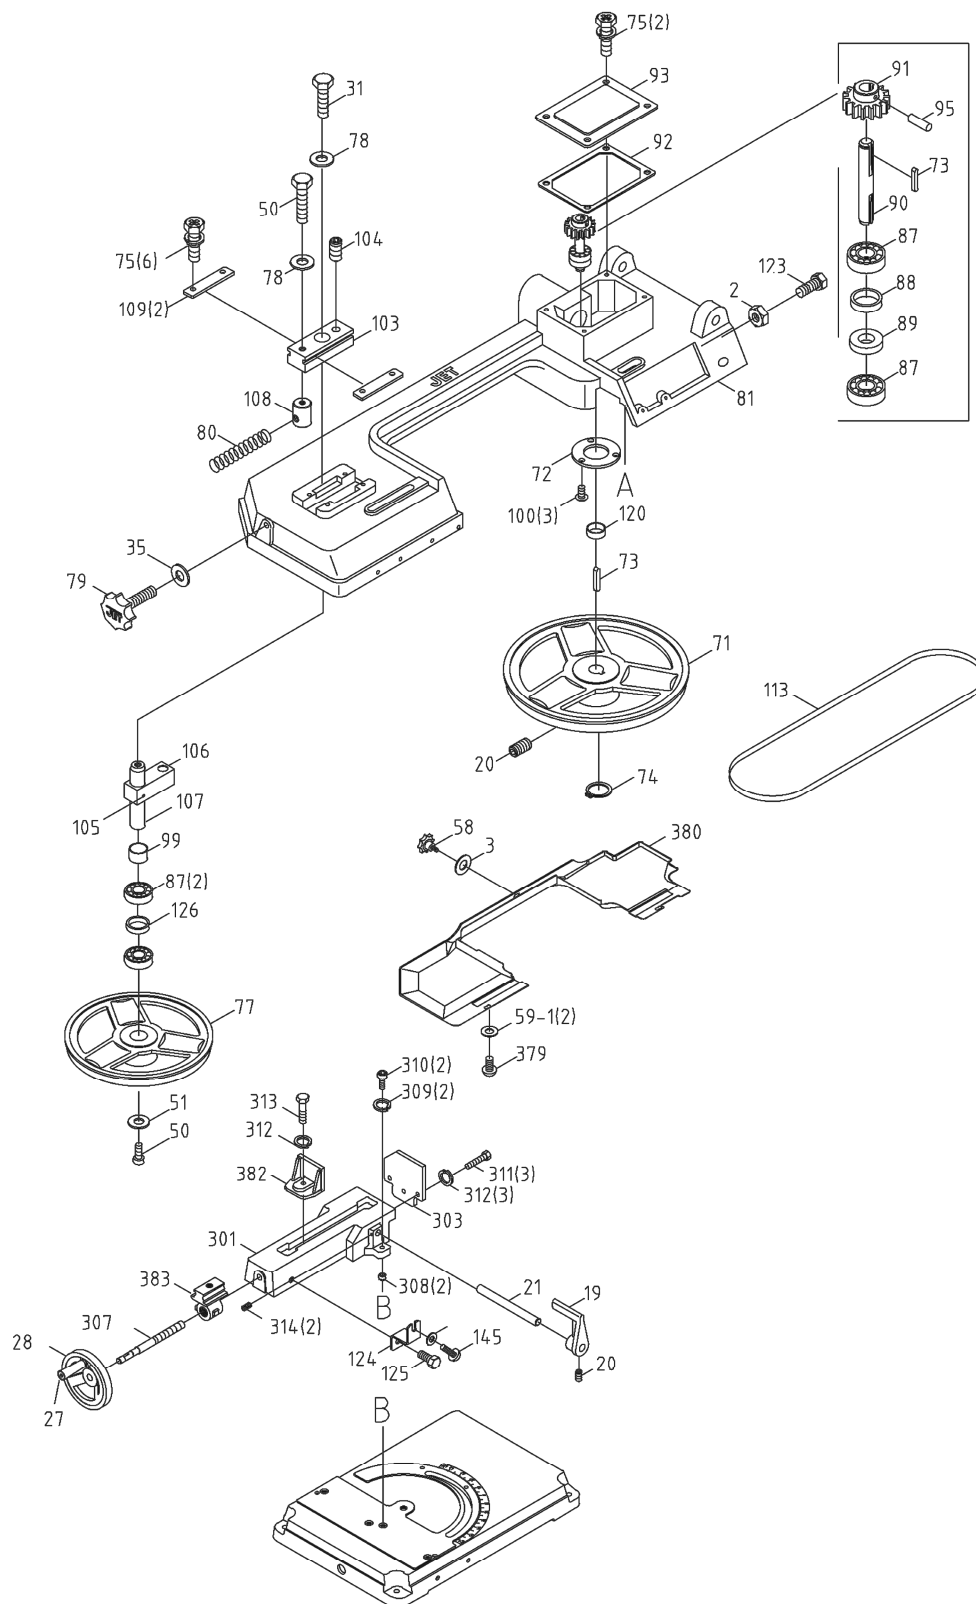


Breakdown for Bow Assembly

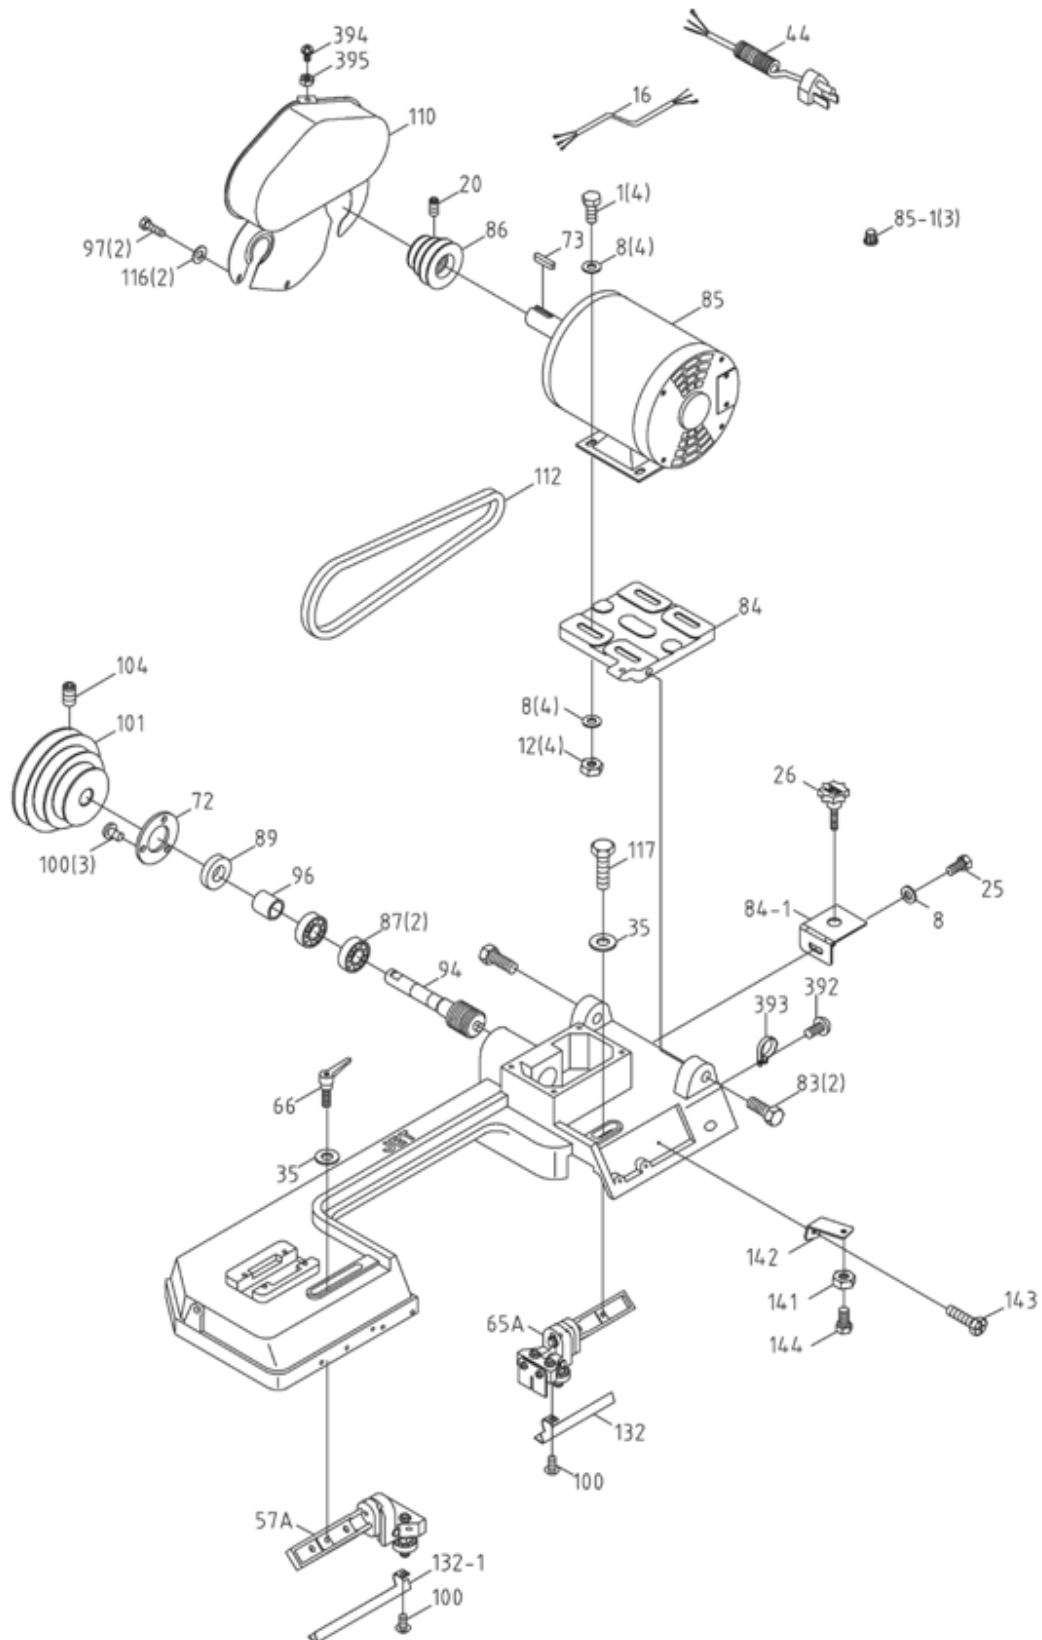

Breakdown for blade guide e Assembly

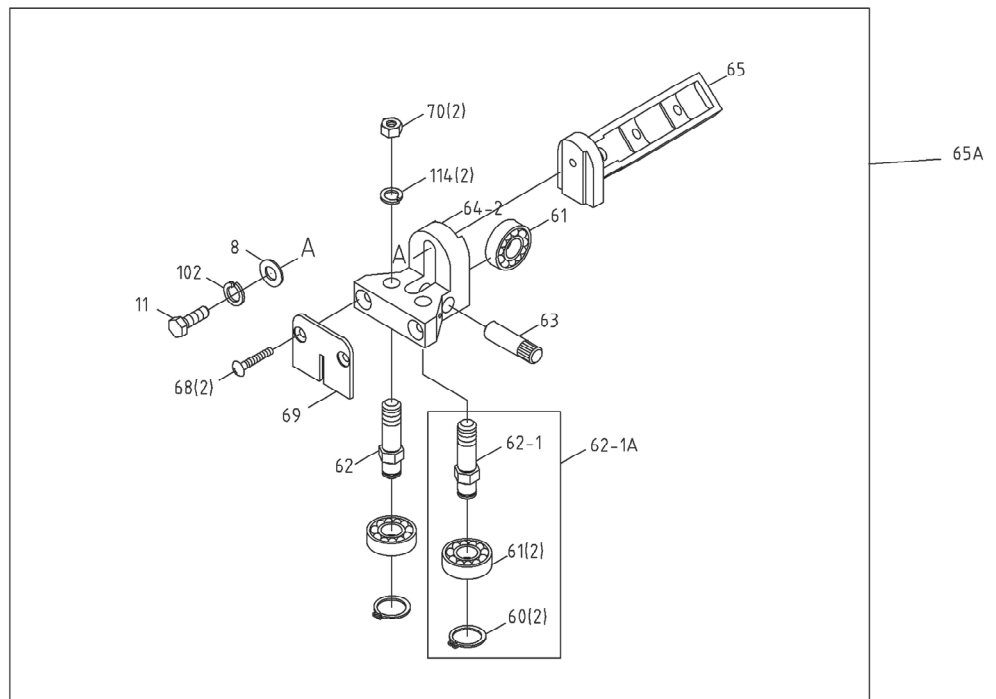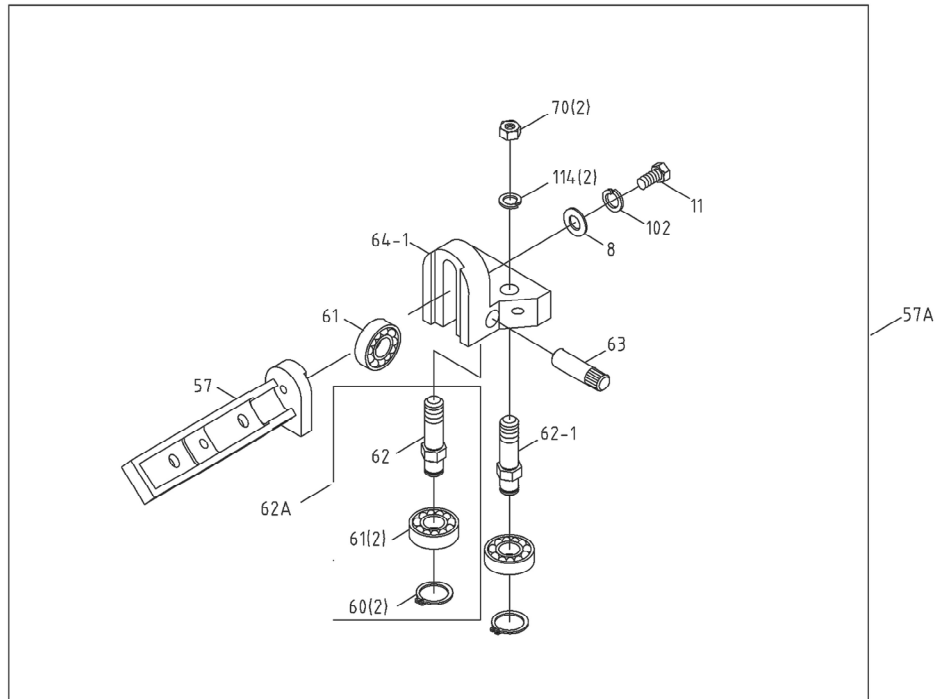

Breakdown for Base Assembly

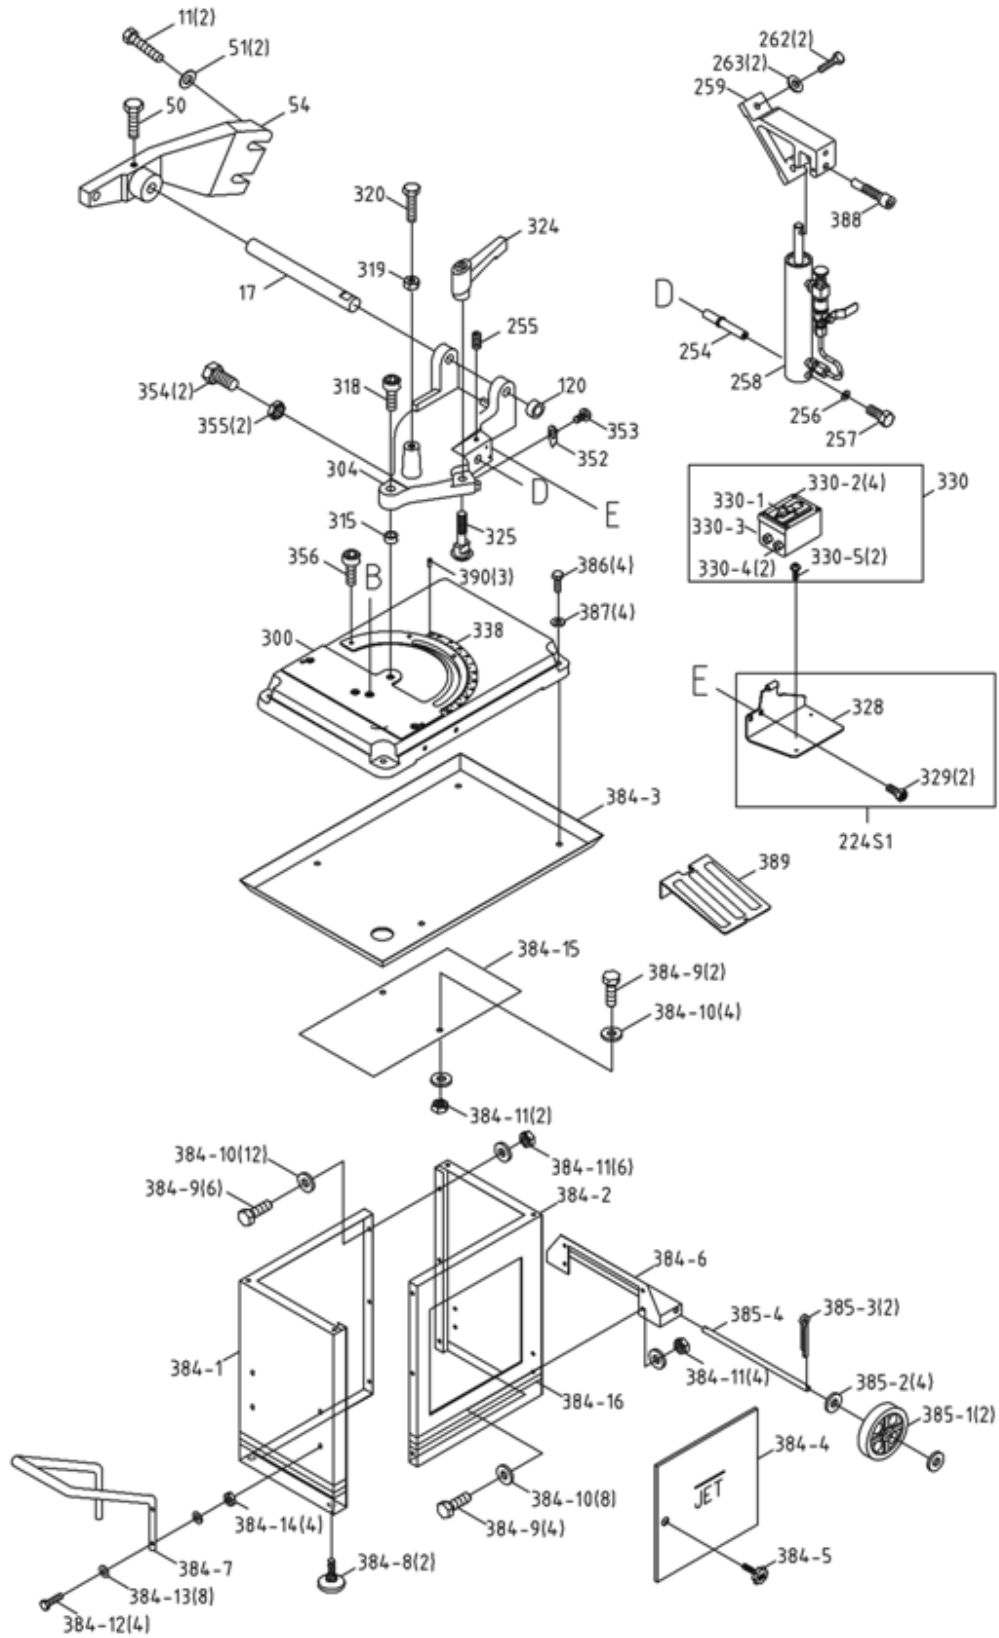

Parts List for the MBS-56CS Bandsaw

Index No.	Part No.	Description	Size	Qty.
1.....	TS-0051031	Hex Cap Bolt.....	5/16"x3/4"	4
2.....	TS-0561011	Hex Nut.....	1/4"	1
3.....	TS-0680021	Flat Washer.....	1/4"	4
8.....	TS-0680031	Flat Washer.....	5/16"	11
11.....	TS-0051051	Hex Cap Bolt.....	5/16"x1"	4
12.....	TS-0561021	Hex Nut.....	5/16"	4
16.....	HVBS462-016	Electric Cord.....		1
17.....	HVBS462-017	Pivoting Rod.....		1
19.....	HVBS462-019	Stock Stop.....		1
20.....	TS-0270021	Socket Set Screw.....	5/16"x5/16"	4
21.....	HVBS462-021	Stock Stop Rod.....		1
24.....	TS-0561021	Hex Nut.....	5/16"	1
25.....	TS-0051031	Hex Cap Bolt.....	5/16"x3/4"	1
26.....	HVBS56M-026E	Plum Knob.....		1
27.....	HVBS462-027	Wheel Handle.....		1
28.....	HVBS462-028	Hand Wheel.....		1
31.....	HVBS56M-031	Screw.....	5/16"x1"	1
35.....	TS-0680041	Flat Washer.....	3/8"x1"	3
44.....	HB56M-044	Electric Cable.....		1
50.....	TS-0081031	Hex Cap Bolt.....	5/16"x3/4"	3
51.....	TS-0680031	Flat Washer.....	5/16"	3
54.....	MBSS56CS-054E	Pivot Bracket.....		1
57.....	HVBS56M-057	Adjustable Bracket LH.....		1
57A.....	HVBS56M-057A	Adjustable Bracket Assembly LH.....		1
58.....	HVBS462-058	Knob.....	1/4"	1
60.....	HVBS462-060	C-Clip.....	S10	4
61.....	BB-6000ZZ	Ball Bearing.....	6000ZZ	6
62.....	HVBS462-062	Guide Pivot.....		2
62A.....	HVBS462-062A	Center Shaft Assembly (Includes: #60-62).....		1
62-1.....	HVBS462-062-1	Centrifugal Guide Pivot.....		2
62-1A.....	HVBS462-062-1A	Eccentric Shaft Assembly (Includes: #60,61,62-1).....		1
63.....	HVBS462-063	Bearing Shaft Pin.....		2
64-1.....	HVBS462-064-1	Blade Seat Left.....		1
64-2.....	HVBS462-064-2	Blade Seat Right.....		1
65.....	HVBS56M-065	Adjustable Bracket RH.....		1
65A.....	HVBS56M-065A	Adjustable Bracket Assembly RH.....		1
66.....	HVBS56M-066	Lock Knob.....		1
68.....	TS-0813021	Flat Head Machine Screw.....	1/4"X3/8"	2
69.....	HVBS462-069	Deflector Plate.....		1
70.....	TS-0561031	Hex Nut.....	3/8"	4
71.....	HVBS462-071	Blade Wheel Drive.....		1
72.....	HVBS462-072	Bearing Cover.....		2
73.....	HVBS462-073	Key.....	5x5x25	3
74.....	HVBS56M-060	C-Clip.....	S15	1
75.....	HVBS462-075	Hex Cap Bolt (w/Washer).....	1/4"x1/2"	6
77.....	HVBS462-077	Idle Blade Wheel.....		1
78.....	TS-0680031	Flat Washer.....	5/16"	2
79.....	HVBS462-079	Blade Tension Knob.....	3/8"	1
80.....	HVBS462-080	Spring.....		1
81.....	HVBS56M-081	Saw Bow.....		1
83.....	TS-0070031	Cap Screw.....	1/2"x1-1/2"	2
84.....	HVBS56M-084	Motor Mount Plate.....		1
84-1.....	HVBS56M-084-1	Tension Bracket.....		1

Index No.	Part No.	Description	Size	Qty.
85	HVBS463-085E	Motor	1/2HP/1ph/230V	1
	HVBS56M-085OLE	Overload Protection	4A	1
	HVBS56M-085CE	Capacitor Cover (not shown)		1
	HVBS56M-085CAE	Capacitor (not shown)	200MFD,125VAC	1
	HVBS56M-085FE	Fan (not Shown)		1
	HVBS56M-085FCE	Fan Cover (not shown)		1
86	HVBS462-086	Motor Pulley		1
87	BB-6202ZZ	Ball Bearing	6202ZZ	6
88	HVBS462-088	Bearing Bushing		1
89	OS-15375	Oil Seal		2
90	HVBS462-090	Transmission Wheel Shaft		1
91	HVBS462-091	Worm Gear		1
92	HVBS462-092	Gear Box Gasket		1
93	HVBS462-093	Gear Box Cover		1
94	HVBS462-094	Worm Gear (w/Shaft)		1
95	HVBS462-095	Spring Pin		1
96	HVBS462-096	Bearing Bushing		1
97	TS-0050011	Hex Cap Bolt	1/4"x1/2"	2
97-1	HBS56S-97-1	Washer	1/4"	2
99	HVBS462-099	Spacer		1
100	HVBS462-100	Flat Cross Head Screw	5/32"x3/8"	8
101	HVBS462-101	Worm Gear Pulley		1
102	TS-0720081	Lock Washer	5/16"	2
103	HVBS462-103	Blade Tension Sliding Plate		1
104	TS-0270051	Socket Set Screw	5/16"x1/2"	2
105	HVBS462-105	Spring Pin		1
106	HVBS462-106	Sliding Plate Draw Block		1
107	HVBS462-107	Blade Wheel Shaft		1
108	HVBS462-108	Shaft Block		1
109	HVBS462-109	Blade Tension Sliding Guide		2
110	HVBS462-110	Motor Pulley Cover Assembly		1
112	VB-A22	V-Belt	A22	1
113	414301	Blade		1
114	TS-0680041	Flat Washer	3/8"	4
117	TS-0090061	Hex Screw	3/8"x1-1/4"	1
120	HVBS462-120	Bushing		2
123	TS-0050031	Cap Screw	1/4"x3/4"	1
124	HVBS463-124	Machine Screw	3/16"x3/4"	1
125	TS-0051031	Hex Cap Bolt	5/16"x3/4"	1
126	HVBS462-126	Bushing		1
132	HVBS462-132	Blade Guard-Right		1
132-1	HVBS462-132A	Blade Guard-Left		1
159-1	HBS56S-159-1	Nut		1
141	TS-0561021	Hex. Nut	5/16"	1
142	HBS56S-142	Switch Cut Off Trip		1
143	TS-0050011	Hex Cap Screw	1/4"x1/2"L	1
144	TS-0813021	Flat Head Machine Screw	1/4"x3/8"	2
145	TS-0813021	Flat Head Machine Screw	1/4"x3/8"	1
254	HBS56S-254	Support Rod		1
255	TS-0267032	Socket Set Screw	1/4"x5/16"	1
256	TS-0680011	Flat Washer	3/16"	1
257	HBS56S-257	Hex Cap Bolt	3/16"x3/8"	1
258	HBS56S-258	Cylinder Assembly		1
259	HBS56S-259	Cylinder Upper Support		1
262	TS-0050051	Hex Cap Bolt	1/4"x1"	2

Index No.	Part No.	Description	Size	Qty.
263	TS-0720071	Spring Washer	1/4"	2
300	HBS56S-300	Stand Top		1
301	HBS56S-301	Working table		1
303	HBS56S-303	Wall plate		1
304	HBS56S-304	Swivel Base(Upper)		1
307	HBS56S-307	Acme Screw		1
308	HBS56S-308	Bushing		2
309	TS-0680011	Flat Washer	3/16"	2
310	TS-0208081	Hex. Socket Head Screw	5/16"x1-1/2"	2
311	TS-0081031	Hex Cap Bolt	5/16"x3/4"	3
312	TS-0680032	Flat Washer	5/16"	5
313	TS-0208071	Hex. Socket Head Screw	5/16"x1-1/4"	2
314	TS-0267041	Set Screw	1/4"x3/8"	2
315	HBS56S-315	Positioning Ring		1
316	TS-0561011	Hex Nut	1/2"	1
318	TS-0070071	Hex Cap Bolt	1/2"x2 1/2"L	1
319	TS-0561031	Hex Nut	3/8"	1
320	TS-0070071	Hex Cap Bolt	1/2"x2-1/2"	1
324	HBS56S-324	Handle		1
325	HBS56S-325	Carriage Screw	3/8"	1
328	HBS56S-328	Switch Base		1
329	HBS56S-329	Cross Round Head Screw	3/16"x3/8"	2
330	HBS56S-330	Switch		1
330-1	HBS56S-330-1	ON/OFF Switch		1
330-2	HBS56S-330-2	Screw		4
330-3	HBS56S-330-3	Electrical Box		1
330-4	HBS56S-330-4	Cable Connector		2
330-5	HBS56S-330-5	Screw		2
338	HBS56S-338	Scale		1
350	TS-0570011	Hex Nut	1/4"	4
351	TS-0050031	Hex Cap Bolt	1/4"x3/4"	4
352	HBS56S-352	Scale		1
353	HBS56S-353	Cross Round Head Screw	3/16"x1/2"	1
354	TS-0050051	Hex Cap Bolt	1/4"x1"	2
355	TS-0570011	Hex. Nut	1/4"	2
356	HBS56S-356	Hex Cap Bolt	5/16"x1"	1
379	HVBS462-379	Cross Round Head Screw	1/4"-20x3/8"	2
380	HVBS56M-380	Blade Back Safety Cover		1
382	HBS56S-382	Movable vise plate		1
383	HBS56S-383	Bracket		1
384	HBS56S-384	Stand Complete Assembly		1
384-1	HBS56S-384-1	Side Plate(left)		1
384-2	HBS56S-384-2	Side Plate(Right)		1
384-3	HBS56S-384-3	Chip Pan		1
384-4	HBS56S-384-4	Front Door		1
384-5	HBS56S-384-5	Knob		1
384-6	HBS56S-384-6	Wheel Base		1
384-7	HBS56S-384-7	Hand Rod		1
384-8	HBS56S-384-8	Rubber Head Screw		2
384-9	TS-0051081	Hex. Head Screw	5/16" -18x3/4"	12
384-10	HBS56S-384-10	Flat Washer	5/16"x23xt2mm	24
384-11	HBS56S384-11	Hex.Nut	5/16"-18	12
384-12	TS-0051071	Hex.Head Screw	5/16"-18x1-1/2"	4
384-13	TS-0680031	Flat Washer	5/16" x 23xt2mm	8
384-14	TS-0561021	Hex .Nut	5/16"-18	4

Index No.	Part No.	Description	Size	Qty.
384-15.	HBS56S-384-15	Plate		1
384-16.	HBS56S-384-16	Color Strip		1
385	HBS56S-385	Wheel Complete Assembly		1
385-1...	HBS56S-385-1	Wheel		1
385-2...	HBS56S-385-2	Flat Washer	5/8"x30xt3	4
385-3...	HBS56S-385-3	Pin	3x25	2
385-4...	HBS56S-385-4	Wheel Rod		1
386	TS-0060061	Hex Head Screw	3/8"-16x1-1/4"	4
387	TS-0680041	Flat Washer	3/8"x20xt2	4
388	HBS56S-388	Cap Screw		1
389	HBS56S-389	Protect Plate		1
390	HBS56S-390	Rivet	Ø2x5	3
392	TS-081C022	Cross Round Head Screw	3/16" -24x3/8"	1
393	HBS56S-393	Wire Ring		1
394	TS-081C032	Cross Round Head Screw	3/16"-24x1/2"	1
395	HBS56S-395	Hex. Nut	3/16"	1