



MBS-1220DC

METAL WORKING BANDSAW

MBS-1220DC...50000344T....3~400V, 50Hz

PARTS LIST



JPW Tool Group Hong Kong Limited

98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC

www.jettools.com


Импортер в РФ: ООО «ИТА Технолоджи»

105082, Москва, Переведеновский пер., д. 17


www.jettools.ru

Made in Taiwan / Сделано на Тайване

MBS-1220DC Breakdown for Stand Assembly

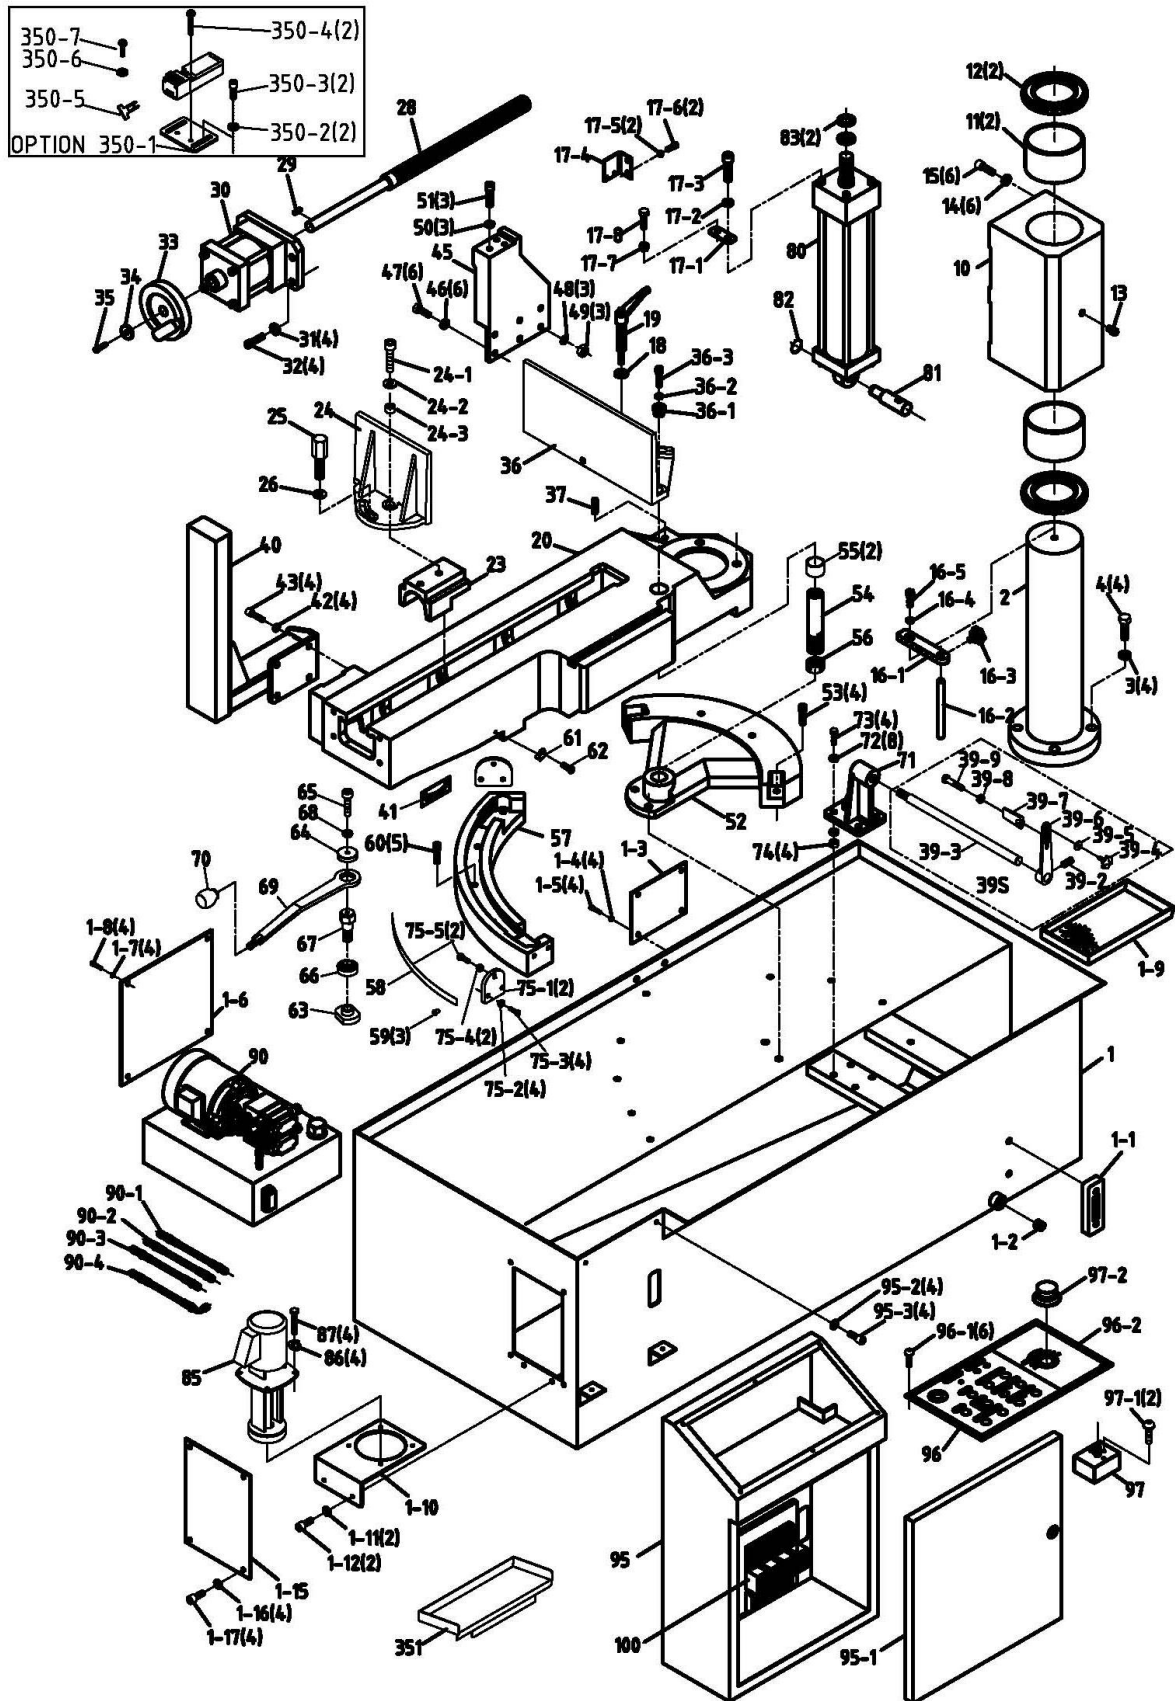

MBS-1220DC Breakdown for Bow Assembly

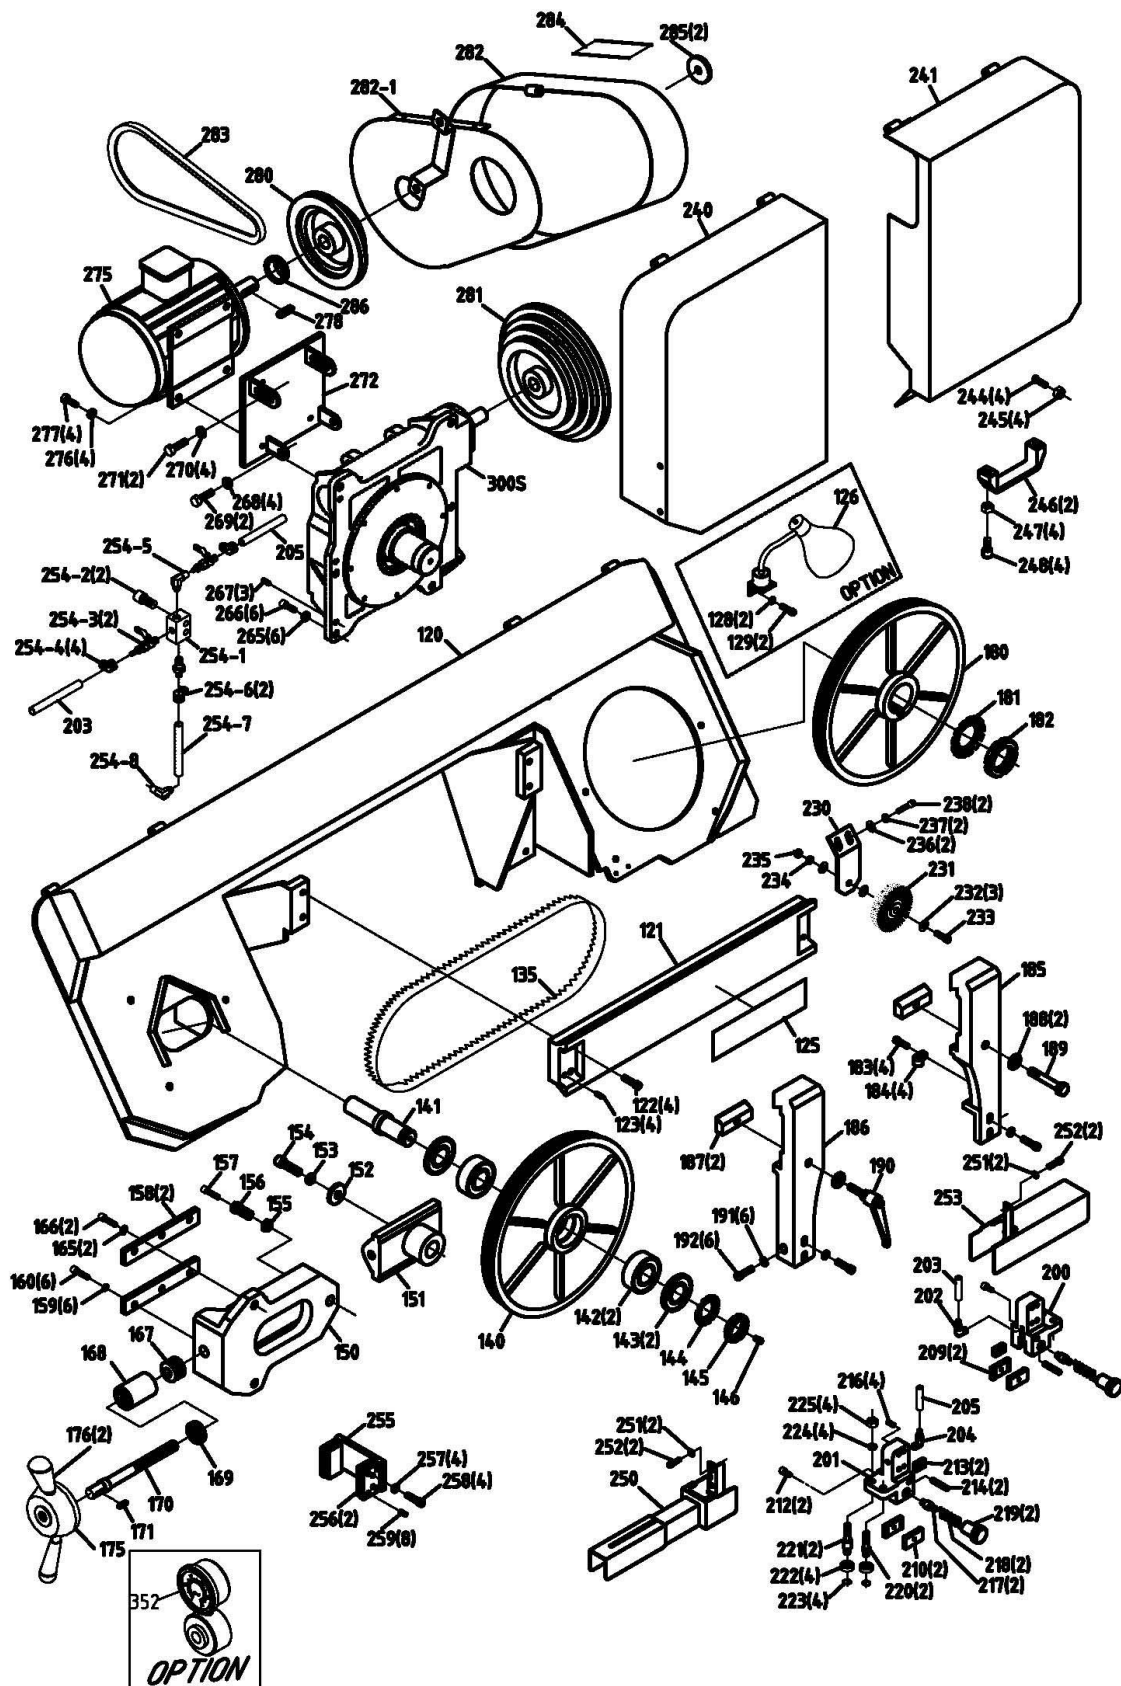

MBS-1220DC Part list for Stand and Bow Assembly

Index No.	Part No.	Description	Size	Qty
1.....	MBS1220DC-01G	Stand.....		1
1-1.....	HBS1220DC-1-1	Fuel gauge		1
1-2.....	HBS1220DC-1-2	Oil Hole Plug.....	PT-1/2"	1
1-3.....	MBS1220DC-1-3G	Side Cover.....		1
1-4.....	HBS1220DC-1-4	Spring Washer	M6	4
1-5.....	HBS1220DC-1-5	Round cross screw hole.....	M6X12L	4
1-6.....	HBS1220DC-1-6G	side cover.....		1
1-7.....	HBS1220DC-1-7	Spring Washer	M6	4
1-8.....	HBS1220DC-1-8	Round cross screw hole.....	M6X12L	4
1-9.....	HBS1220DC-1-9	Sheng cut tank.....		1
1-10.....	HBS1220DC-1-10G	Bracket.....		1
1-11.....	HBS1220DC-1-11	Spring Washer	M6	2
1-12.....	HBS1220DC-1-12	Round cross screw hole.....	M6X12L	2
1-15.....	HBS1220DC-1-15G	Side cover		1
1-16.....	HBS1220DC-1-16	Spring Washer	M6	4
1-17.....	HBS1220DC-1-17	Round cross screw hole.....	M6X12L	4
2.....	HBS1220DC-2	Stand charge		1
3.....	HBS1220DC-3	Spring Washer	M16	4
4.....	HBS1220DC-4	Hex. Head Screw.....	M16X50L	4
10.....	HBS1220DC-10G	Guide Block.....		1
11.....	HBS1220DC-11	Bushing	110x115x95L	2
12.....	HBS1220DC-12	Oil Seal.....	DKB110x126x12B	2
13.....	HBS1220DC-13	Grease Fitting.....	PT-1/8"	1
14.....	HBS1220DC-14	Spring Washer	M12	6
15.....	HBS1220DC-15	Hex. Socket Head Screw	M12X35L	6
16-1.....	HBS1220DC-16-1	Upper support plate		1
16-2.....	HBS1220DC-16-2	Ceiling support rods.....		1
16-3.....	HBS1220DC-16-3	Plum Screw	M6x13L	1
16-4.....	HBS1220DC-16-4	Spring Washer	M10	1
16-5.....	HBS1220DC-16-5	Hex. Head Screw.....	M10X25L	1
17-1.....	HBS1220DC-17-1	Touch piece.....		1
17-2.....	HBS1220DC-17-2	Spring Washer	M10	1
17-3.....	HBS1220DC-17-3	Hex. Socket Head Screw	M10X20L	1
17-4.....	HBS1220DC-17-4	Lower bracket.....		1
17-5.....	HBS1220DC-17-5	Spring Washer	M6	2
17-6.....	HBS1220DC-17-6	Hex. Socket Head Screw	M6X15L	2
17-7.....	HBS1220DC-17-7	Hex. Nut	M10	1
17-8.....	HBS1220DC-17-8	Hex. Head Screw.....	M10X35L	1
18.....	MBS1220DC-18	Flat Washer	M10	1
19.....	MBS1220DC-19	Handle	M10x37L	1
20.....	MBS1220DC-20	Base		1
23.....	MBS1220DC-23	Base Nut.....		1
24.....	MBS1220DC-24	Vice Activities		1
24-1.....	MBS1220DC-24-1	Hex. Socket Head Screw	M10x40L	1
24-2.....	MBS1220DC-24-2	Flat Washer	M10	1
24-3.....	MBS1220DC-24-3	Bushing		1
25.....	MBS1220DC-25	Fixed Bolt		1
26.....	MBS1220DC-26	Flat Washer	M10	1
28.....	MBS1220DC-28	Screws		1
29.....	HBS1220DC-29	Two-round key.....	KEY=5X5X25L	1
30.....	HBS1220DC-30	Hydraulic cylinder		1
31.....	HBS1220DC-31	Spring Washer	M10	4
32.....	HBS1220DC-32	Hex. Socket Head Screw	M10X40L	4
33.....	HBS1220DC-33	Hand wheel		1


Index No.	Part No.	Description	Size	Qty
34.....	MBS1220DC-34	Flat Washer	M6.....	1
35.....	HBS1220DC-35	Hex. Socket Head Screw	M6X12L	1
36.....	MBS1220DC-36	Fixed Vise.....		1
36-1.....	MBS1220DC-36-1	Flasher Washer		1
36-2.....	MBS1220DC-36-2	Spring Washer	M12	1
36-3.....	MBS1220DC-36-3	Hex. Socket Head Screw	M12x45L.....	1
37.....	MBS1220DC-37	Hex. Headless Screw.....	M10x35L.....	1
39S.....	HBS1220DC-39S	Length Stop Set.....		1
39-2.....	HBS1220DC-39-2	Hex. Headless Screw.....	M6-1.0Px10L	1
39-3.....	HBS1220DC-39-3	Distance Set Rod.....		1
39-4.....	HBS1220DC-39-4	Plum Screw		1
39-5.....	HBS1220DC-39-5	Washer.....	1/4"x19xt1.5mm.....	1
39-6.....	HBS1220DC-39-6	Support Rod		1
39-7.....	HBS1220DC-39-7	Distance Set Bracket		1
39-8.....	HBS1220DC-39-8	Hex. Nut	M10-1.5P.....	1
39-9.....	HBS1220DC-39-9	Hex. Head Screw.....	M10-1.5Px25L	1
40.....	MBS1220DC-40G	Sliding column		1
41.....	MBS1220DC-41	Label		1
43.....	MBS1220DC-43	Hex. Head Screw.....	M12X30L	4
45.....	MBS1220DC-45	Setting Base		1
46.....	MBS1220DC-46	Spring Washer	M8	4
47.....	MBS1220DC-47	Hex. Socket Head Screw	M8X25L	4
48.....	MBS1220DC-48	Flat Washer	M8.....	3
49.....	MBS1220DC-49	Hex Nut	M8.....	3
50.....	MBS1220DC-50	Spring Washer	M10	3
51.....	MBS1220DC-51	Hex. Socket Head Screw	M10X75L	3
52.....	MBS1220DC-52G	Rotation Base.....		1
53.....	MBS1220DC-53	Hex. Socket Head Screw	M10X40L	4
54.....	MBS1220DC-54	Rotation Shaft.....		1
55.....	MBS1220DC-55	Shaft Bushing	Φ 30*Φ35.5*25L	2
56.....	MBS1220DC-56	Hex Nut	M30XP1.5.....	1
57.....	MBS1220DC-57G	Slide Base		1
58.....	MBS1220DC-58	Scale		1
59.....	MBS1220DC-59	Rivet.....	§ 2X5	3
60.....	MBS1220DC-60	Hex. Socket Head Screw	M10X30L	4
61.....	MBS1220DC-61	Needle.....		1
62.....	MBS1220DC-62	Hex. Socket Head Screw	M6X10L	1
63.....	MBS1220DC-63	Special Nut.....		1
64.....	MBS1220DC-64	Fix Plate		1
65.....	MBS1220DC-65	Hex. Socket Head Screw	M8x25L	1
66.....	MBS1220DC-66	Special Washer		1
67.....	MBS1220DC-67	Special Screw.....		1
68.....	MBS1220DC-68	Spring Washer.....	M12	1
69.....	MBS1220DC-69	Handle Bar		1
70.....	MBS1220DC-70	Plastic Round Knob		1
71.....	MBS1220DC-71	Set Base.....		1
72.....	MBS1220DC-72	Flat Washer	M8.....	8
73.....	MBS1220DC-73	Hex. Head Screw.....	M8x25L	4
74.....	MBS1220DC-74	Hex. Nut	M12	4
75-1.....	MBS1220DC-75-1	Stop plate		2
75-2.....	MBS1220DC-75-2	Spring Washer	M8.....	4
75-3.....	MBS1220DC-75-3	Hex. Head Screw.....	M8x25L	4
75-4.....	MBS1220DC-75-4	Hex. Nut	M12	2
75-5.....	MBS1220DC-75-5	Hex. Head Screw.....	M12x30L.....	2
80.....	HBS1220DC-80	Hydraulic cylinder		1
83.....	HBS1220DC-83	Hex. Nut	M24XP2	3

Index No.	Part No.	Description	Size	Qty
85	HBS1220DC-85	Pump	400V/3PH	1
86	HBS1220DC-86	Spring Washer	M6	4
87	HBS1220DC-87	Hex. Head Screw	M6-1.0Px15L	4
90	HBS1220DC-90	Hydraulic unit	1HP,,3CC/red	1
	HBS1220DC-90AE	Hydraulic Motor	1HP,,50Hz	1
90-1	HBS1220DC-90-1	Hydraulic tube	1/4"X1/4HX1050L	1
90-2	HBS1220DC-90-2	Hydraulic tube	1/4"X1/4HX1050L	1
90-3	HBS1220DC-90-3	Hydraulic tube	1/4"X1/4HX1600L	1
90-4	HBS1220DC-90-4	Hydraulic tube	1/4"X1/4HX2800L	1
95-1	HBS1220DC-95-1	Door panel		1
95-2	HBS1220DC-95-2	Washer	M6	4
95-3	HBS1220DC-95-3	Hex. Headless Screw	M6X10L	4
120	MBS1220DC-120G	Bow Saw		1
121	HBS1220DC-121G	Cross-Supports		1
122	HBS1220DC-122	Hex. Socket Head Screw	M10X45L	4
123	HBS1220DC-123	Hex. Headless Screw	M10X20L	4
125	HBS1220DC-125	Slide rear sight		1
126	HBS1220DC-126	Work lamp		1
128	HBS1220DC-128	Spring Washer	M8	1
129	HBS1220DC-129	Hex. Socket Head Screw	M8X15L	1
135	HBS1220DC-135	Band saw	3950X34X1.1	1
140	HBS1220DC-140	Driven wheel		1
141	HBS1220DC-141	Driven shaft		1
142	HBS1220DC-142	Oblique roller bearings	#30207J	2
143	HBS1220DC-143	Bearing anti-dust cover		2
144	HBS1220DC-144	Bearing washer	AW-07	1
145	HBS1220DC-145	Bearing nut	AN-07,M35XP1.5	1
146	HBS1220DC-146	Grease Fitting	PT-1/8"	1
150	HBS1220DC-150G	Tension slide		1
151	HBS1220DC-151G	Tension slider		1
152	HBS1220DC-152	Gasket		1
153	HBS1220DC-153	Spring Washer	M10	1
154	HBS1220DC-154	Hex. Socket Head Screw	M10X20L	1
155	HBS1220DC-155	Nut		1
156	HBS1220DC-156	Adjustable Screw		1
157	HBS1220DC-157	Hex. Socket Head Screw	M12X75L	1
158	HBS1220DC-158	Plate		2
159	HBS1220DC-159	Spring Washer	M10	6
160	HBS1220DC-160	Hex. Socket Head Screw	M10X25L	6
165	HBS1220DC-165	Spring Washer	M14	2
166	HBS1220DC-166	Hex. Socket Head Screw	M14X45L	2
167	HBS1220DC-167	Compression Spring		1
168	HBS1220DC-168	Casing		1
169	HBS1220DC-169	Client Bearing	#51104	1
170	HBS1220DC-170	Tension Screw		1
171	HBS1220DC-171	Single Round Head Key	6X6X25L	1
175	HBS1220DC-175	Blade Tension Handle		1
176	HBS1220DC-176	Knob		2
180	HBS1220DC-180	Driving Wheel		1
181	HBS1220DC-181	Bearing Washer	AW-13	1
182	HBS1220DC-182	Bearing Nut	AN-13,,M65XP2	1
183	HBS1220DC-183	Round Cross Screw Hole	M5X10L	4
184	HBS1220DC-184	Hose Clamp	PlasticX1/4"	4
185	HBS1220DC-185G	Master Arm		1
186	HBS1220DC-186G	Left Arm		1
187	HBS1220DC-187	Briquetting		2

Index No.	Part No.	Description	Size	Qty
188	HBS1220DC-188	Washer	M12	2
189	HBS1220DC-189	Hex. Head Screw	M12X60L	1
190	HBS1220DC-190	Handle Any	M12X60L	1
191	HBS1220DC-191	Washer	M10	6
192	HBS1220DC-192	Hex. Socket Head Screw	M10X30L	6
200	HBS1220DC-200	Blade Adjustable (Rear)		1
201	HBS1220DC-201	From The Guide Block		1
202	HBS1220DC-202	90 Degree Copper Connectors	PT-1/8"X1/4"	1
203	HBS1220DC-203	Tube	1/4net pipeX450L	1
204	HBS1220DC-204	90 Degree Copper Connectors	PT-1/8"X1/4"	1
205	HBS1220DC-205	Tube	1/4net pipeX800L	1
209	HBS1220DC-209	Guides		2
210	HBS1220DC-210	Guides		2
212	HBS1220DC-212	Hex. Socket Head Screw	M6x15L	2
213	HBS1220DC-213	Up Guides		2
214	HBS1220DC-214	Bearing Pin		2
216	HBS1220DC-215	Hex. Headless Screw	M8X20L	4
217	HBS1220DC-216	Pressure Shaft		2
218	HBS1220DC-217	Compression spring		2
219	HBS1220DC-219	Pressure block		2
220	HBS1220DC-220	Leading axle		2
221	HBS1220DC-221	After the lead axle		2
222	HBS1220DC-222	Ball Bearings	#6200-RS	4
223	HBS1220DC-223	C-Retainer Ring	S10	4
224	HBS1220DC-224	Spring Washer	M10	4
225	HBS1220DC-225	Hex. Nut	M10	4
230	HBS1220DC-230	brush holder		1
231	HBS1220DC-231	Brush wheel		1
232	HBS1220DC-232	Washer	M8	3
233	HBS1220DC-233	Hex. Headless Screw	M8X40L	1
234	HBS1220DC-234	Spring Washer	M8	1
235	HBS1220DC-235	Hex. Nut	M8	1
236	HBS1220DC-236	Washer	M6	2
237	HBS1220DC-237	Spring Washer	M6	2
238	HBS1220DC-238	Hex. Socket Head Screw	M6X15	2
240	HBS1220DC-240G	Driven wheel cover		1
241	HBS1220DC-241G	Drive Wheel Cover		1
242	HBS1220DC-242	Round Head Screw	M16X16L	6
243	HBS1220DC-243	Hex. Head Screw	M16X15L	4
244	HBS1220DC-244	Hex. Head Screw	M6X15	4
245	HBS1220DC-245	Hex. Nut	M6	4
246	HBS1220DC-246	Knob		2
247	HBS1220DC-247	Hex. Nut	M8	4
248	HBS1220DC-248	Round Head Screw	M8X20L	4
250	HBS1220DC-250	Cover from the serrated		1
251	HBS1220DC-251	Washer	M6	4
252	HBS1220DC-252	Round Head Screw	M6X16L	4
253	HBS1220DC-253	Cover Master sawtooth		1
254-1	HBS1220DC-254-1	3 Way Valve		1
254-2	HBS1220DC-254-2	Hex. Socket Head Screw	M6x30L	2
254-3	HBS1220DC-254-3	Copper Hancock	PT1/4X1/4	2
254-4	HBS1220DC-254-4	Hose Clamp	SUS304X1/4"	4
254-5	HBS1220DC-254-5	90 degree copper connectors	PT1/4XPT1/4	1
254-6	HBS1220DC-254-6	Hose Clamp	SUS304X1/2"	2
254-7	HBS1220DC-254-7	Tube	1/2X2800L	1
254-8	HBS1220DC-254-8	90 degree copper connectors	PT3/8X1/2	1

Index No.	Part No.	Description	Size	Qty
255	HBS1220DC-255G..	Bracket		1
256	HBS1220DC-256	Sliding plate		2
257	HBS1220DC-257	Washer	M8	4
258	HBS1220DC-258	Hex. Socket Head Screw	M8X20L	4
259	HBS1220DC-259	Hex. Headless Screw	M6X10L	8
265	HBS1220DC-265	Spring Washer	M12	6
266	HBS1220DC-266	Hex. Socket Head Screw	M12X35L	6
267	HBS1220DC-267	Hex. Headless Screw	M12X20L	3
268	HBS1220DC-268	Washer	M12	4
269	HBS1220DC-269	Hex. Head Screw	M12X30L	2
270	HBS1220DC-270	Washer	M12	4
271	HBS1220DC-271	Hex. Head Screw	M12X30L	2
272	HBS1220DC-272	Motor plate		1
275	HBS1220DC-275	Main Motor	3HP	1
276	HBS1220DC-276	Spring Washer	M10	4
277	HBS1220DC-277	Hex. Head Screw	M10X25L	4
278	HBS1220DC-278	Single round head key	8X7X40L	1
280	HBS1220DC-280	Motor pulley		1
281	HBS1220DC-281	Gear pulley		1
282	HBS1220DC-282G..	Motor Wheel Cover		1
282-1	HBS1220DC-282-1G..	Motor wheel plate		1
283	HBS1220DC-283	V-Belt	A-47	1
284	HBS1220DC-284	LABLE		1
285	MBS1220DC-285	Special Washer		2
286	HBS1220DC-286	Bush		1


MBS1220DC Breakdown for Gear Box transmission Assembly

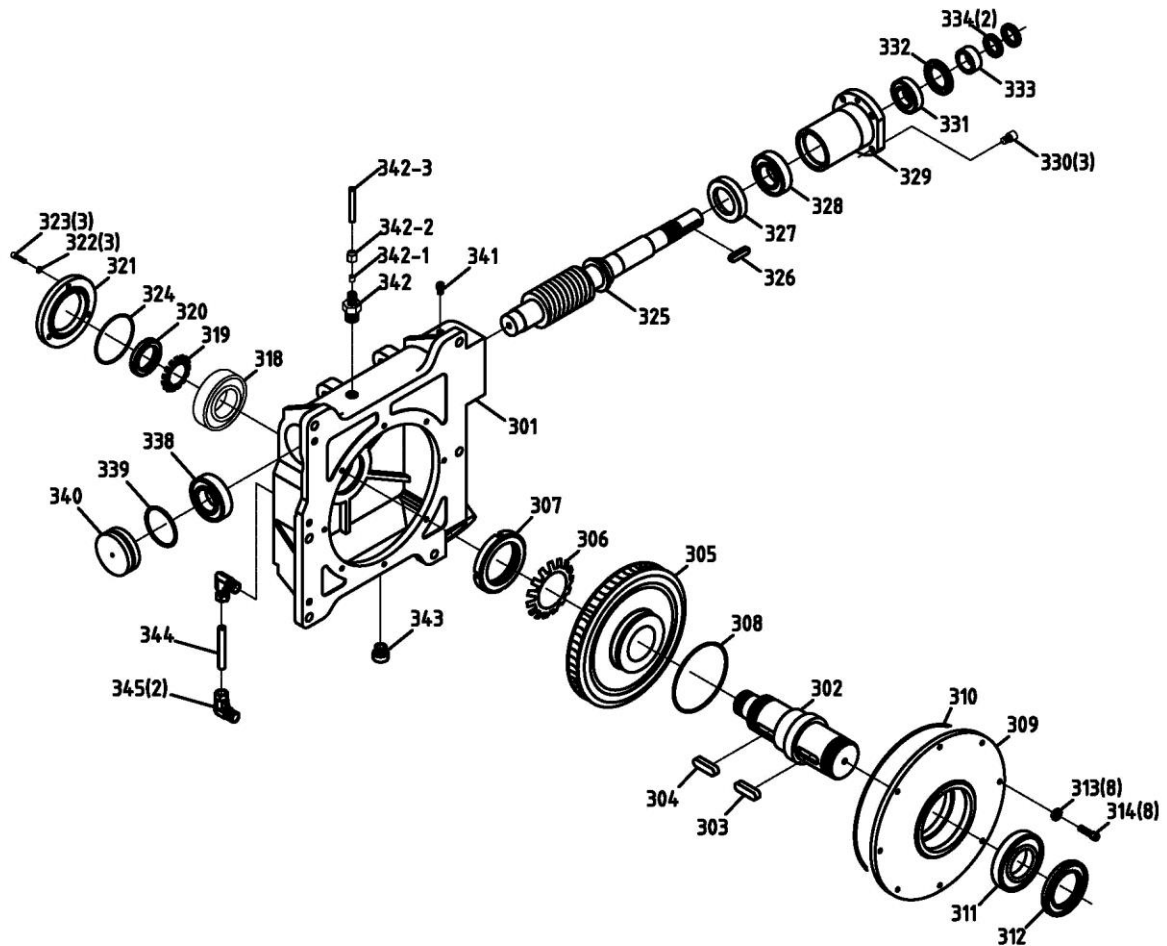

MBS1220DC Part list for Gear Box transmission Assembly




Index No.	Part No.	Description	Size	Qty
300S.....	HBS1220DC-300SG	Gear box Assembly	#137.5,E=22.5	1
301.....	HBS1220DC-301G..	Gearbox		1
302.....	HBS1220DC-302	Output Shaft		1
303.....	HBS1220DC-303	Two-round key	15X10X50L.....	1
304.....	HBS1220DC-304	Two-round key	15X10X45L.....	1
305.....	HBS1220DC-305	Worm gear.....		1
306.....	HBS1220DC-306	Bearing washer.....	AW-12	1
307.....	HBS1220DC-307	Bearing nut.....	AN-12,,M60XP2.....	1
308.....	HBS1220DC-308	O-Retainer Ring	G85,,ID85x3.1W	1
309.....	HBS1220DC-309G..	Cap		1
310.....	HBS1220DC-310	O-Retainer Ring	G245,ID245x3.1W	1
311.....	HBS1220DC-311	Oblique roller bearings.....	#32013J	1
312.....	HBS1220DC-312	Oil Seal.....	TC75X100X12B.....	1
313.....	HBS1220DC-313	Spring Washer	M8.....	8
314.....	HBS1220DC-314	Hex. Socket Head Screw	M8X25L	8
318.....	HBS1220DC-318	Oblique roller bearings.....	#30208	1
319.....	HBS1220DC-319	Bearing washer.....	AW-08	1
320.....	HBS1220DC-320	Bearing nut.....	AN-08,,M40XP1.5.....	1
321.....	HBS1220DC-321G..	After the cover		1
322.....	HBS1220DC-322	Spring Washer	M6.....	3
323.....	HBS1220DC-323	Hex. Socket Head Screw	M6X25L	3
324.....	HBS1220DC-324	O-Retaniner Ring	G80,,ID80x3.1W	1
325.....	HBS1220DC-325	Worm.....		1
326.....	HBS1220DC-326	Two-round key	8X7X40L.....	1
327.....	HBS1220DC-327	Oil Seal Cover		1
328.....	HBS1220DC-328	Oblique roller bearings.....	#30207J	1
329.....	HBS1220DC-329G..	Input shaft cover		1
330.....	HBS1220DC-330	Hex. Socket Head Screw	M8X20L	3
331.....	HBS1220DC-331	Oblique roller bearings.....	#30206	1
332.....	HBS1220DC-332	Oil Seal.....	TC40X62X9B.....	1
333.....	HBS1220DC-333	Collar.....		1
334.....	HBS1220DC-334	Bearing nut.....	AN-06,,M30XP1.5.....	2
338.....	HBS1220DC-338	Ball Bearings	#6207-Z	1
339.....	HBS1220DC-339	O-Retainer Ring	G65,,ID65x3.1W	1
340.....	HBS1220DC-340G..	Client cover		1
341.....	HBS1220DC-341	Grease Fitting.....	PT-1/8"	1
342.....	HBS1220DC-342	oil plug.....	PT-1/2"	1
343.....	HBS1220DC-343	Oil Hole Plug.....	PT-3/8"	1
344.....	HBS1220DC-344	PU transparent tube.....	D=6mm,120L.....	1
345.....	HBS1220DC-345	90 degree copper connectors.....	PT1/8X6mm	2
350-1.....	HBS1220DC-350-1	Micro Switch Bracket		4
350-2.....	HBS1220DC-350-2	Washer.....	M5.....	4
350-3.....	HBS1220DC-350-3	Hex. Socket Head Screw	M5X8L	4
350-4.....	HBS1220DC-350-4	Cross Round Head Screw.....	M4x25L	4
350-5.....	HBS1220DC-350-5	Switch Plate.....		2
350-6.....	HBS1220DC-350-6	Washer.....	M4.....	4
350-7.....	HBS1220DC-350-7	Cross Round Head Screw.....	M4x10L	4
351.....	HBS1220DC-351	Fluid Collected Plate		1


MBS-1220DC Breakdown for Electric Box Assembly

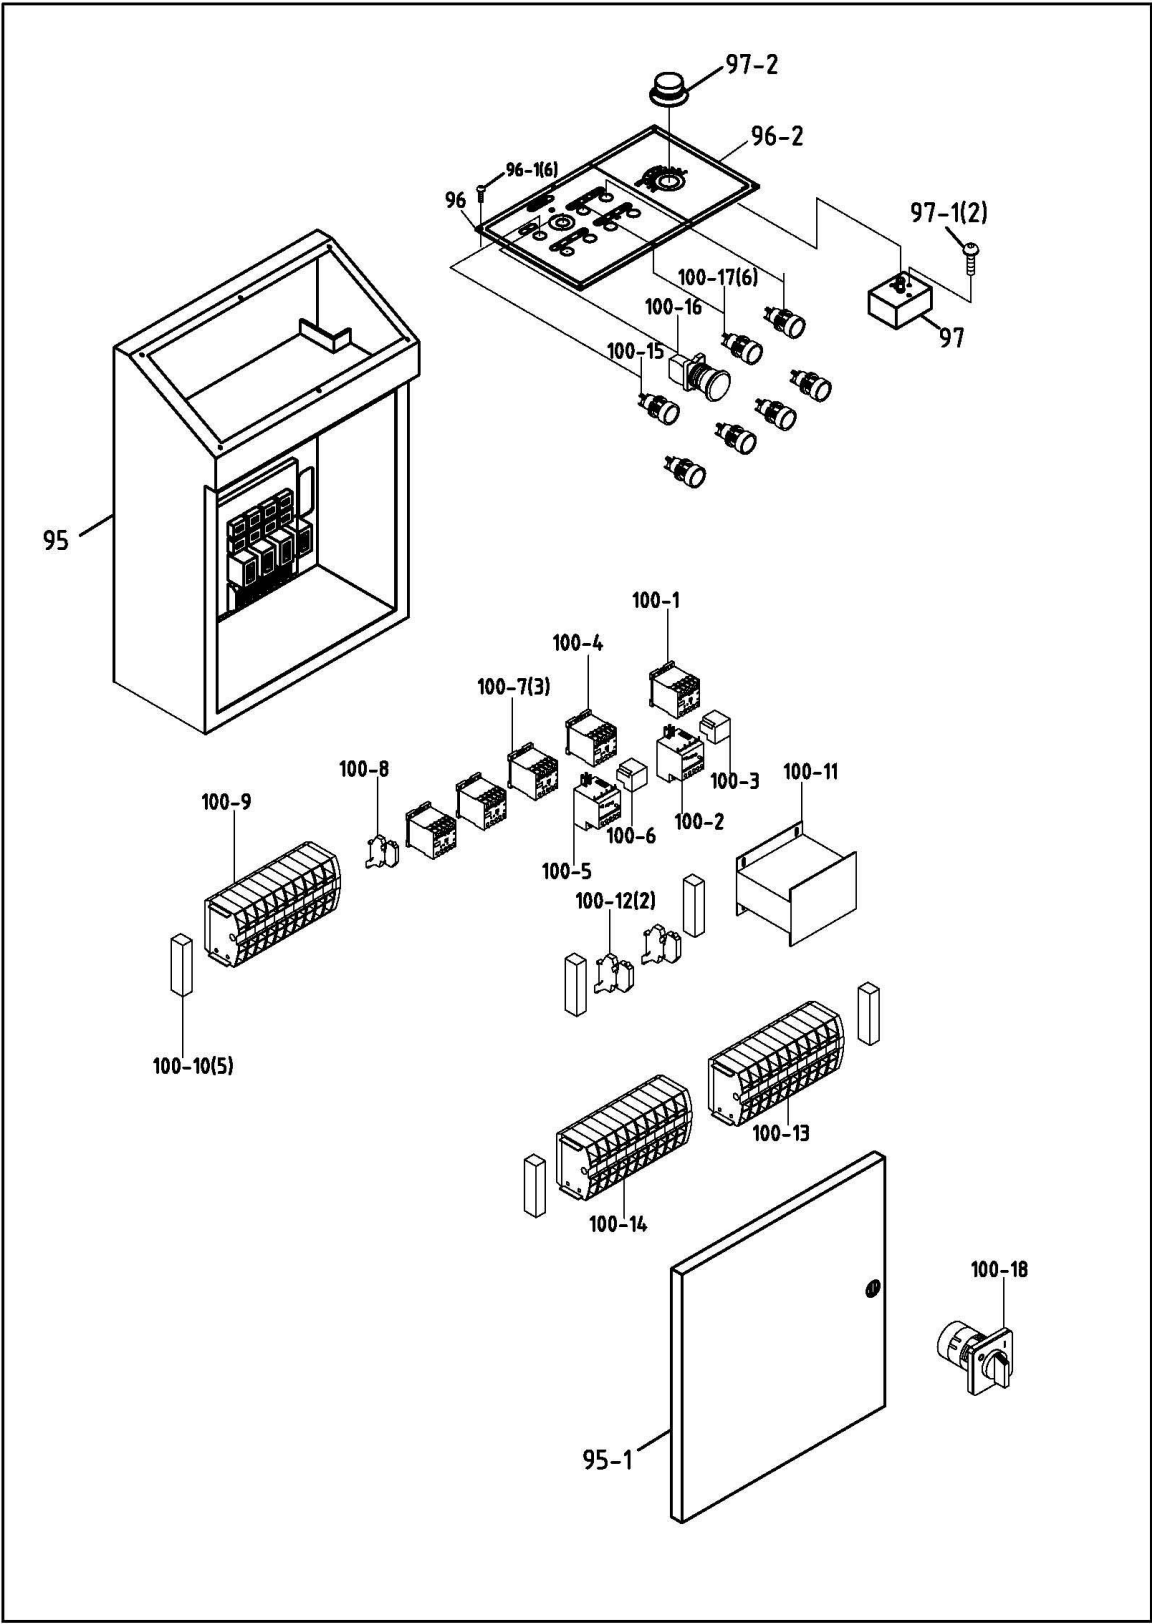

MBS-1220DC Part list for Electric Box Assembly

Index No.	Part No.	Description	Size	Qty
95.....	HBS1220DC-95G.....	Electronic Control Box.....		1
95-1.....	HBS1220DC-95-1G.....	Door panel.....		1
96.....	HBS1220DC-96G.....	Operating stickers.....		1
96-1.....	HBS1220DC-96-1.....	Round cross screw hole.....	M5X10L.....	6
96-2.....	HBS1220DC-96-2.....	Oil-control sticker.....		1
97.....	HBS1220DC-97.....	Valve.....		1
97-1.....	HBS1220DC-97-1.....	Flat Head Cap Screws.....	M5X10L.....	2
97-2.....	HBS1220DC-97-2.....	Knob.....		1
100.....	HBS1220DC-100.....	Electronic Control Components Assembly(not show).....		1
100-1.....	HBS1220DC-100-1.....	Electromagnetic contactor.....		1
100-2.....	HBS1220DC-100-2.....	Overload protection.....	5-8A.....	1
100-3.....	HBS1220DC-100-3.....	Auxiliary contacts.....		1
100-4.....	HBS1220DC-100-4.....	Electromagnetic contactor.....		1
100-5.....	HBS1220DC-100-5.....	Overload protection.....	1.8-2.4A.....	1
100-6.....	HBS1220DC-100-6.....	Auxiliary contacts.....		1
100-7.....	HBS1220DC-100-7.....	Electromagnetic contactor.....		3
100-8.....	HBS1220DC-100-8.....	Fuse.....	5A.....	1
100-9.....	HBS1220DC-100-9.....	Double terminal block.....		17
100-10.....	HBS1220DC-100-10.....	Fixed film.....		5
100-11.....	HBS1220DC-100-11.....	Transformer.....	200VA.....	1
100-12.....	HBS1220DC-100-12.....	Fuse.....	4A.....	2
100-13.....	HBS1220DC-100-13.....	European-style terminal.....		6
100-14.....	HBS1220DC-100-14.....	Indicator.....		1
100-15.....	HBS1220DC-100-15.....	Flat button switch.....		1
100-16.....	HBS1220DC-100-16.....	Emergency switch.....		1
100-17.....	HBS1220DC-100-17.....	Flat button switch.....		6
100-18.....	HBS1220DC-100-18.....	Main power switch.....		1

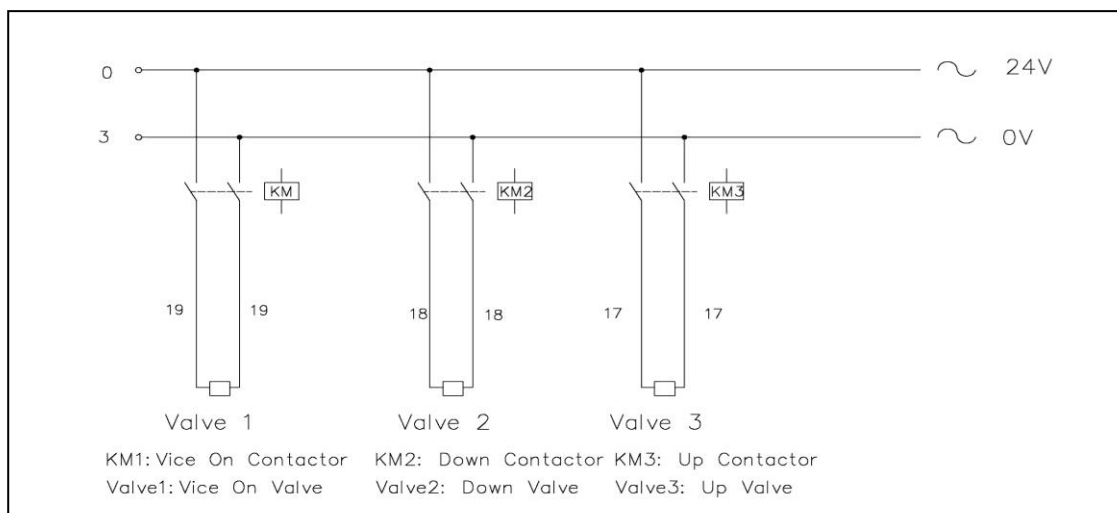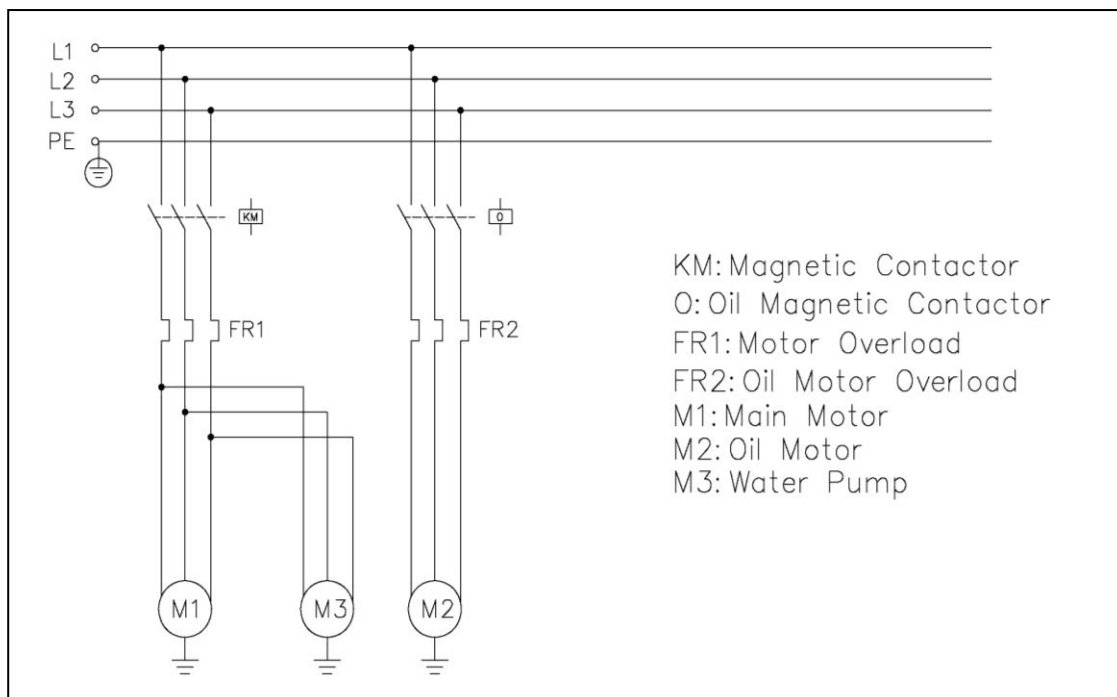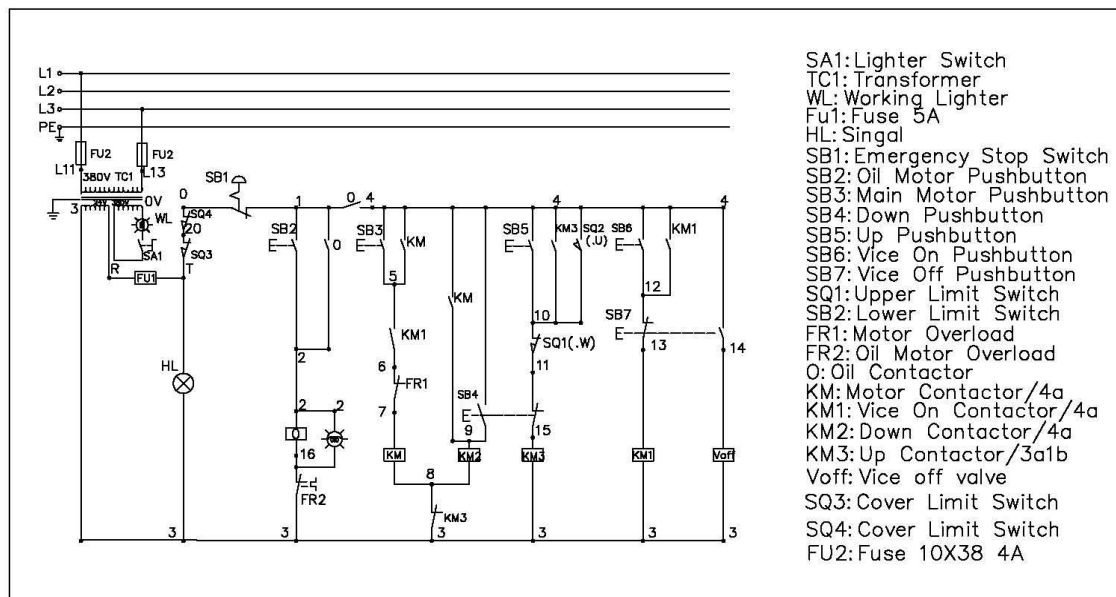

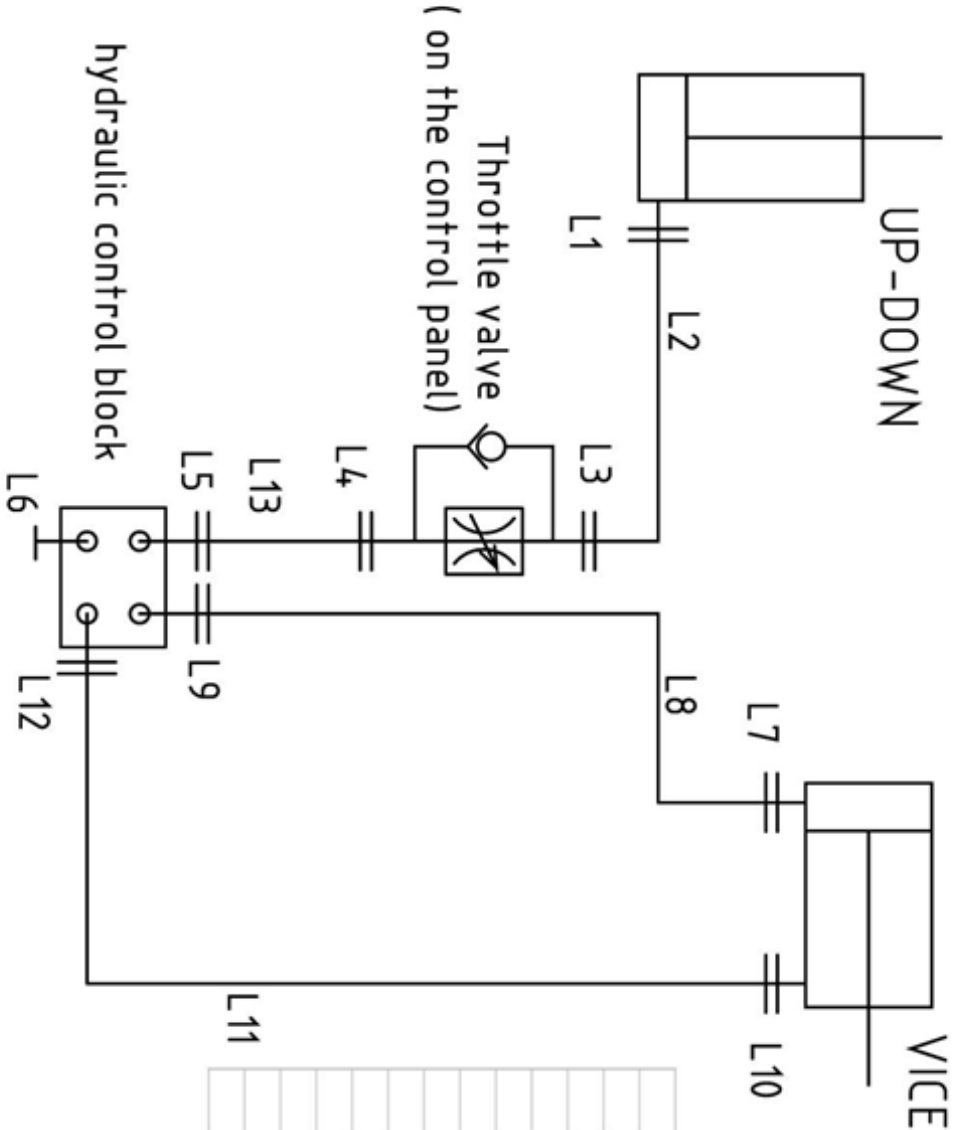

hydraulic control

L1	0 ° Hose fitting	PT3/8"X1/4"H	1
L2	Oil hose	1/4HX1/4H90X2800L	1
L3	90 ° Hose fitting	PT1/4X1/4H	1
L4	90 ° swagelok	PT1/4X1/4H	1
L5	0 ° Hose fitting	PT3/8"X1/4"H	1
L6	Stopper	PT3/8"	1
L7	90 ° Hose fitting	PT3/8"X1/4"H	1
L8	Oil hose	1/4HX1/4HX1050L	1
L9	0 ° Hose fitting	PT3/8"X1/4"H	1
L10	90 ° Hose fitting	PT3/8"X1/4"H	1
L11	Oil hose	1/4HX1/4HX1050L	1
L12	0 ° Hose fitting	PT3/8"X1/4"H	1
L13	Oil hose	1/4HX1/4H90X1600L	1